BSP-D10 / D10s

Wireless controller manual

Schematic diagram of function buttons:

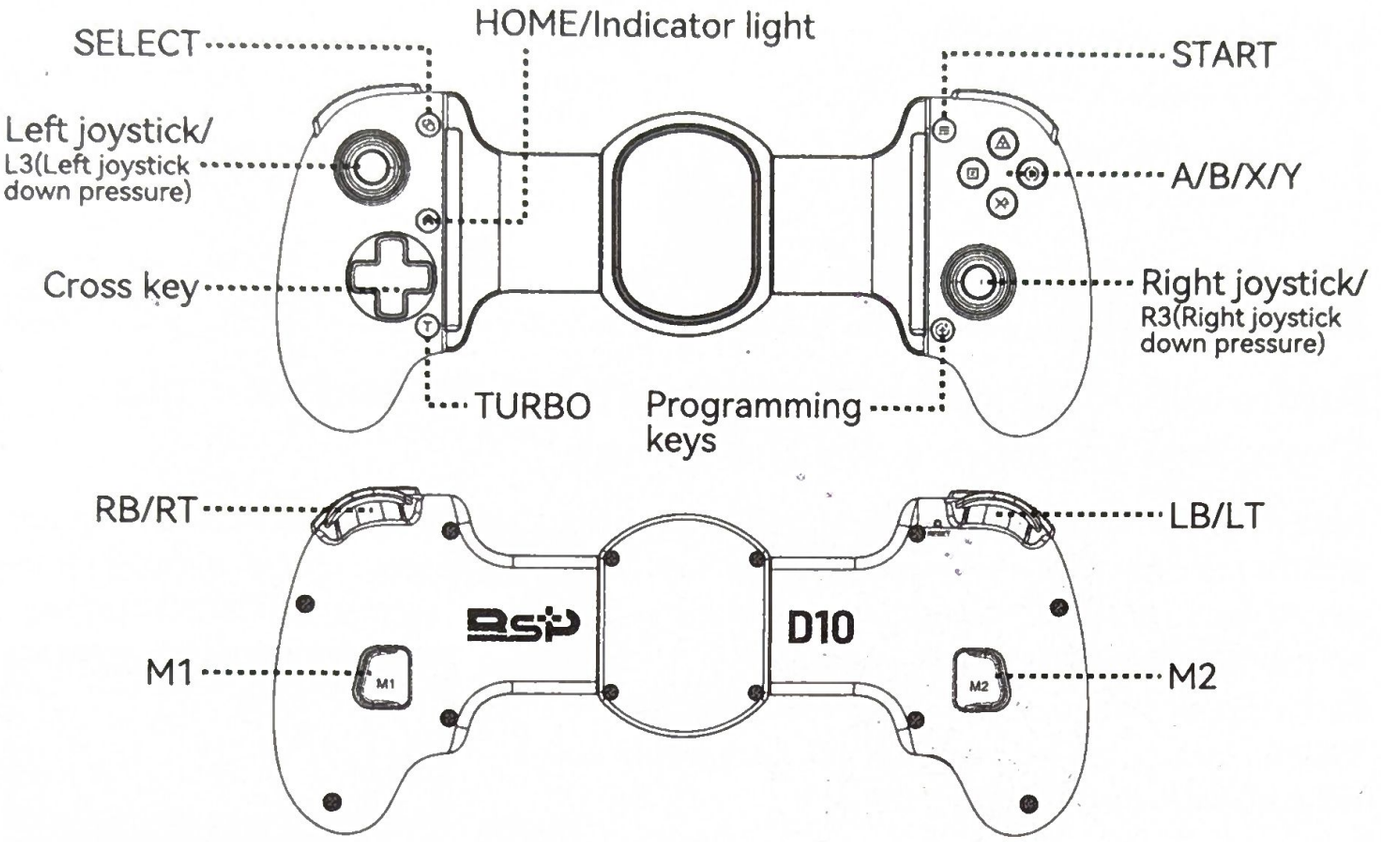

Applicable instructions:

1. This product adopts ergonomic design and has a comfortable touch.
2. Equipped with stretching and shrinking function, it can stretch and store mobile phones with different lengths of 143~260mm.
3. Using Bluetooth 5.2 EDR/BLE connection, the handle is connected to various hosts such as mobile phones through Bluetooth.
4. Supports the ShootingPlus app, which can be downloaded from various mobile application markets.
5. Supports Android and Hongmeng HID standard modes, and can play various game hall games that support HID standard modes.
6. Supports Android 6.0 or higher systems (i.e. ShootingPlus Android mode).
7. Supports MFi games for iOS 13.0 and above systems, and MFi games can be downloaded from the ShanWan MFi app.
8. Support PS3/PS4/SWITCH game console Bluetooth connection to play games, and have gyroscope function.
9. Supports Bluetooth connectivity for Windows 10 laptops and plays X-Input games.
10. Supports USB cable and can play PC/PS3/SWITCH games.
11. The controller can be firmware upgraded and more additional feature modifications and settings can be made by downloading and installing the GamepadSpace app on the phone

★ Due to phone system issues, some phones may not support this device
★ Due to uncontrollable factors such as software upgrades or source code changes on the official game platform, some games cannot be connected and operated with this product. Our company is not responsible for any of the consequences. Our company reserves the final right of interpretation regarding this matter.

Product characteristic parameters:

1. Working voltage: DC3.7V
2. Working current: approximately 10mA
3. Continuous use time:>20H
4. Sleep current:<5uA
5. Charging voltage/current: DC5V/500mA
6. Bluetooth transmission distance:<=8M
7. Battery capacity: 400mAh
8. Standby time: 60 days when fully charged

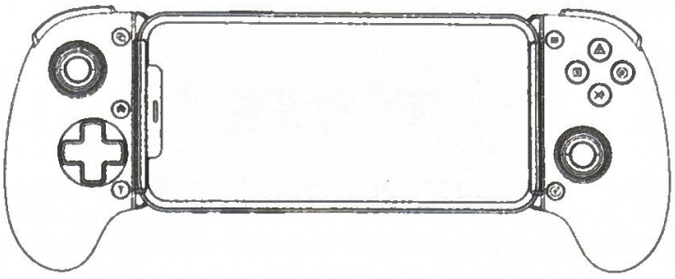

When using this product, please keep the device horizontally placed and ensure that the camera is on the left, and restore the game's key positions to their default settings.

Product Instructions:

Android ShootingPlus mode (HarmonyOS and Android ShootingPlus modes are the same):

Hold down "A" and then press the "HOME" button. After 2 seconds, enter V3 Android mode, and the indicator light on the controller will flash. When the Android phone searches for the device name "BSP-D10", select "connect". After successful connection, the "HOME" button on the controller will remain lit in red.

Successfully connected, you can directly press the "HOME" button, the indicator light will flash slowly, and it will automatically reconnect.

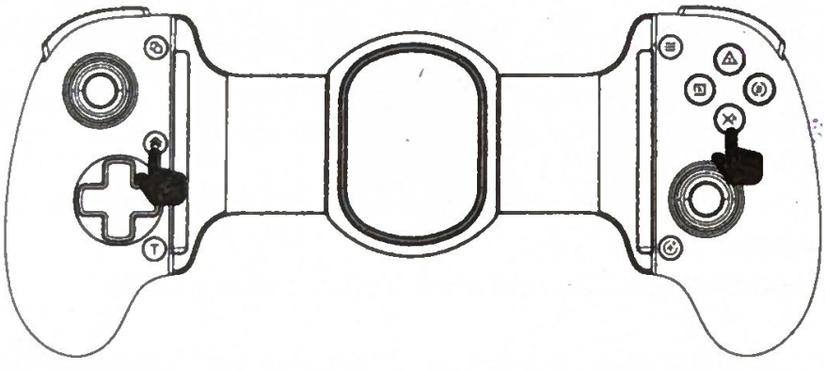

Android/Harmony OS/iOS key mapping function:

Follow the official account "ShootingPlus" and view the default operating instructions in the official account. If you need to set the mapping keys, please download and install the "ShootingPlus" APP, map the keys and adjust the key positions in the APP. ShootingPlus App, Android and Hongmeng systems can be downloaded from various mobile application markets.

ShootingPlus

Android Standard Mode:

Press and hold the "X" button, then press the "HOME" button to enter the standard Android mode. The controller indicator light will flash quickly. When the Android/HarmonyOS phone searches for the device name "BSP-D10", select "connect". After successful connection, the indicator light on the handle remains on [orange].
Successfully connected, you can directly press the "HOME" button, the indicator light will flash slowly, and it will automatically reconnect.
In Android/HarmonyOS standard mode, you can download various game halls and enter the platform to download the required games.

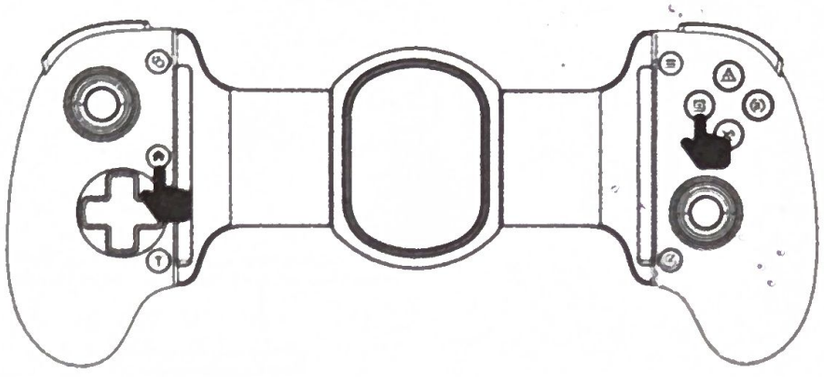

IOS MFi mode:

Hold down "B" and then press the "HOME" button. After 2 seconds, enter iOS MFi mode. The controller indicator light will flash quickly. When the Apple phone searches for the device name "DUALSHOCK 4 Wireless Controller", select "Connect". After successful connection, the indicator light on the handle remains on [purple].
Successfully connected, you can directly press the "HOME" button, the indicator light will flash slowly, and it will automatically reconnect.
MFi games can be downloaded from the ShanWan MFi app.

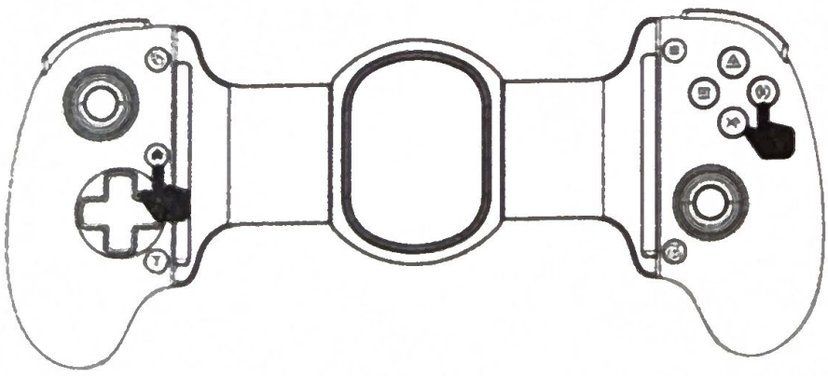

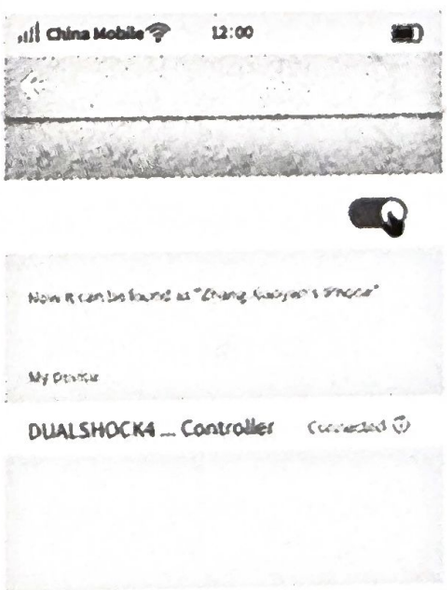

PC X-input Bluetooth mode:

Press and hold the "RB" button, then press the "HOME" button. After 2 seconds, enter the Bluetooth mode of the computer. The indicator light on the controller will flash quickly. Open the computer, find the Bluetooth device to add, click search, and when you find the device name "Xbox Wireless Controller", select connect. After successful connection, the indicator light on the handle remains on [cyan].
Successfully connected, you can directly press the "HOME" button, the indicator light will flash slowly, and it will automatically reconnect.

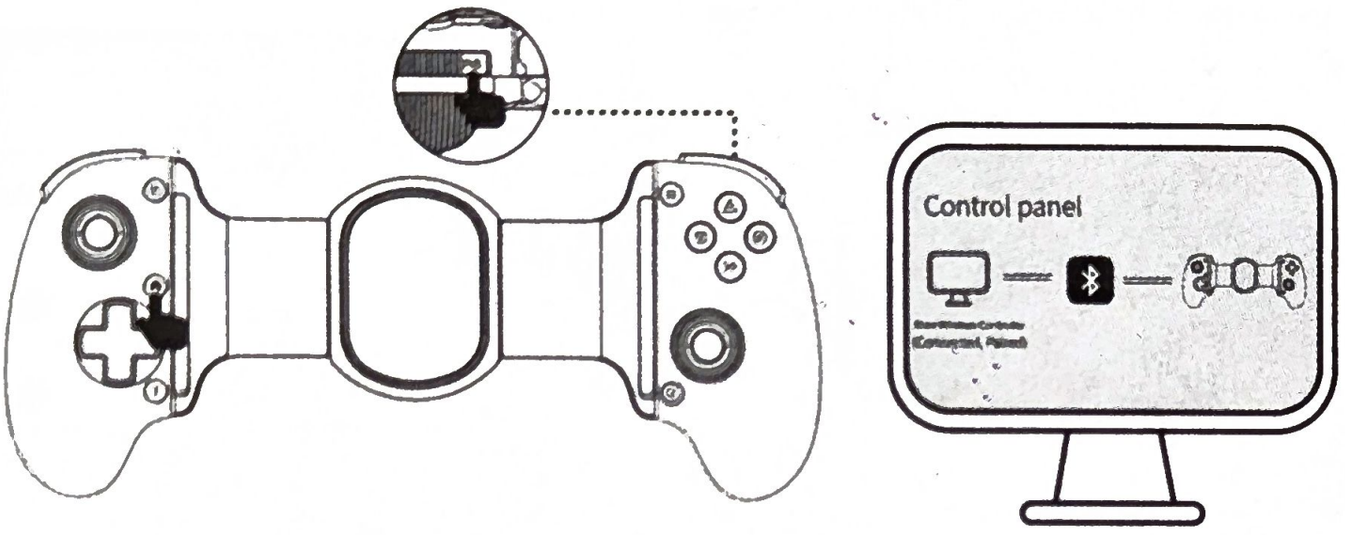

Switch mode:

On the Switch host, select Controller ->Change Grip/Order to enter the Switch host pairing mode interface Press L+R on the controller. Press and hold the "RT" button, then press the "HOME" button. After 2 seconds, enter the SWITCH mode for pairing. The indicator light flashes, and if pairing is successful, the handle indicator light will remain on [green].
Successfully connected, you can directly press the "HOME" button, the indicator light will flash slowly, and it will automatically reconnect.

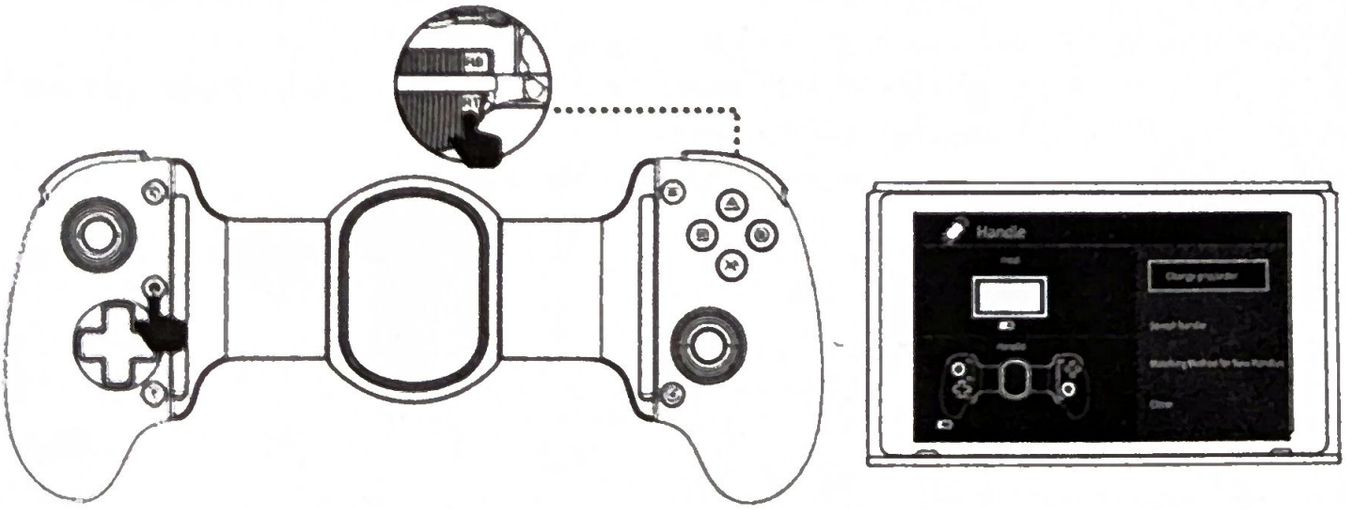

PS3/PS4 mode:

Connect the controller directly to the PS3/PS4 host using a TYPE-C USB cable, press the "HOME" button to pair, and after successful pairing, the controller indicator light will remain on [blue].
Successfully connected, you can directly press the "HOME" button, the indicator light will flash slowly, and it will automatically reconnect.

PC 2.4G computer receiver mode:

Press and hold the "LB" button, then press the "HOME" button. After 2 seconds, enter the computer mode. The indicator light on the controller flashes quickly, indicating that it is in PC connection mode. The computer receiver is plugged into the computer. After successful connection, the indicator light on the handle remains on [cyan].
Successfully connected, you can directly press the "HOME" button, the indicator light will flash slowly, and it will automatically reconnect.

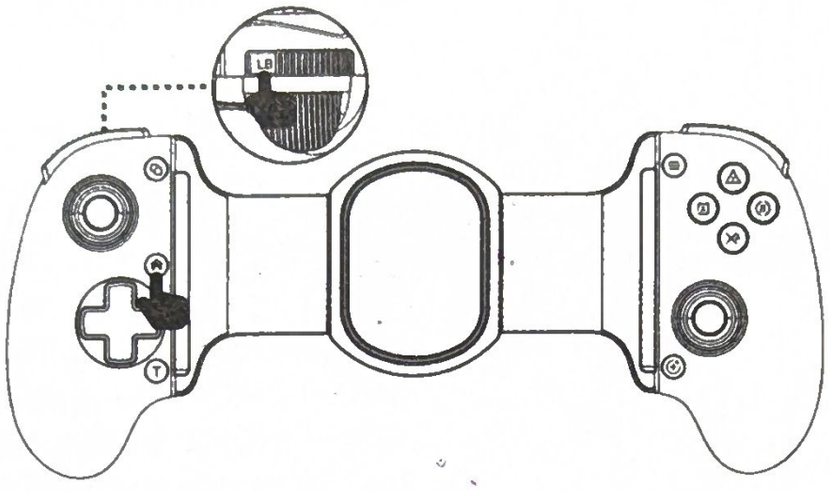

Computer receiver
【 Insert computer 】

Wired mode:

1. Automatic recognition of various system platforms in wired mode, supported by Android, PC (D-input and X-input), PS3, and Switch.
2. On a PC, pressing the "HOME" button for 2 seconds can switch between PC/PS3 mode and XBOX360 mode.
3. On iOS 16.0 and above systems, it is supported to hold down the "START" button and then insert a USB to connect to an iOS computer, iOS phone, or iOS tablet. For iOS wired mode.
4. In the Android phone system, hold down "TURBO" and then insert a USB to connect to the Android phone/tablet, in X-input wired mode.

TURBO settings:

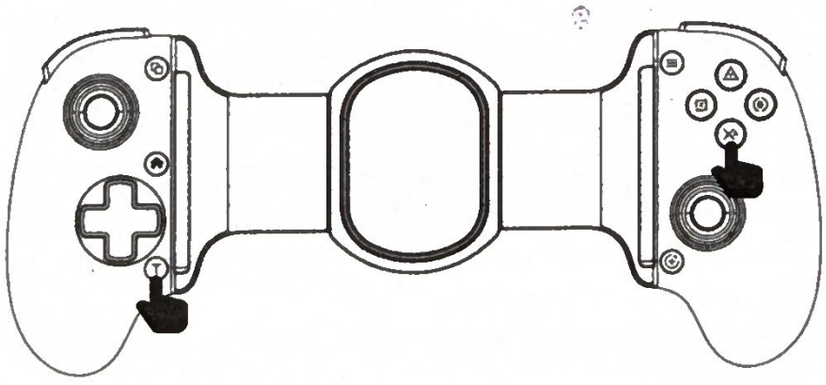

Press "A" and then "T" to activate Turbo burst
Press "A" for the second time and then "T", the "A" button will automatically send consecutive messages
Press "A" for the third time and then "T" to turn off the burst (restore to its original state)

When the "A" button is in AUTO mode, press and hold the "TURBO+left joystick up and down" button to set the speed of the automatic burst, which is 15 beats per second, 25 beats per second, and 8 beats per second, respectively. (Note: The setting method for other function keys is the same as above)

Motor vibration force adjustment:

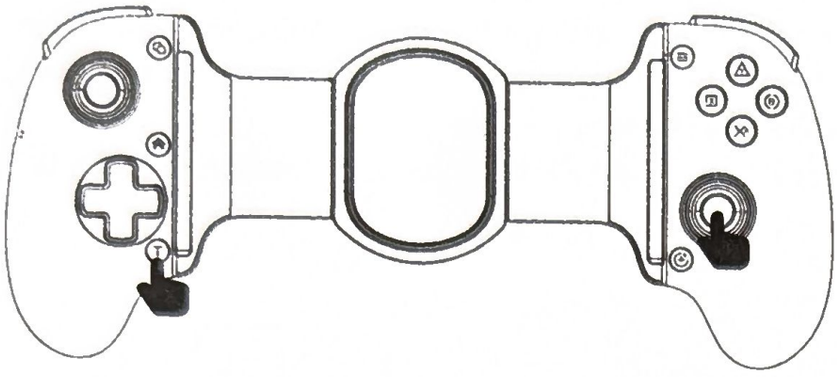

Pressing and holding the TURBO+right joystick up and down can enhance and weaken the motor vibration force

Axis calibration function:

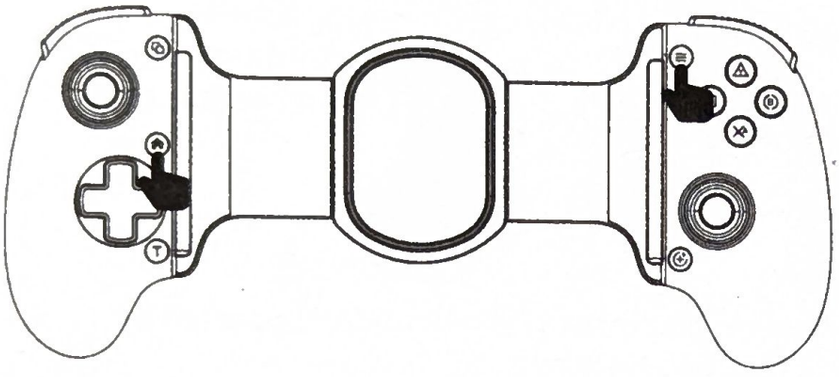

Place the handle flat on the desktop, while holding down the "START+HOME" button, wait for the "status indicator light" to stay on, then release. After calibration is completed, the "status indicator light" will turn off.

Strong body sensation opening:

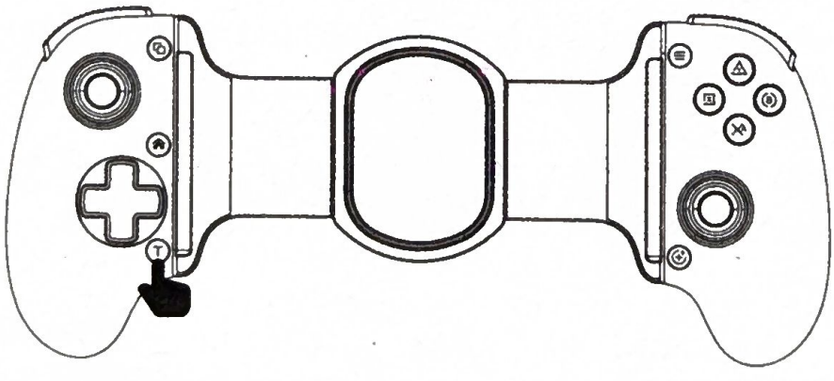

1. Press and hold the "T" button for eight seconds, and if the motor vibrates, switch to the simulated right joystick.
2. When the six axis has been switched to the right joystick, lightly press T to enter the semi open state of the gyroscope. The main use scenario is to assist in shooting and aiming when pressing L2 to open the mirror in FPS games.
3. Press and hold the "T" button again for eight seconds, and if the motor vibrates, switch to the simulated left joystick.
4. Press and hold the "T" button again for eight seconds, and if the motor vibrates, it will be cancelled.

ABXY key value exchange function:

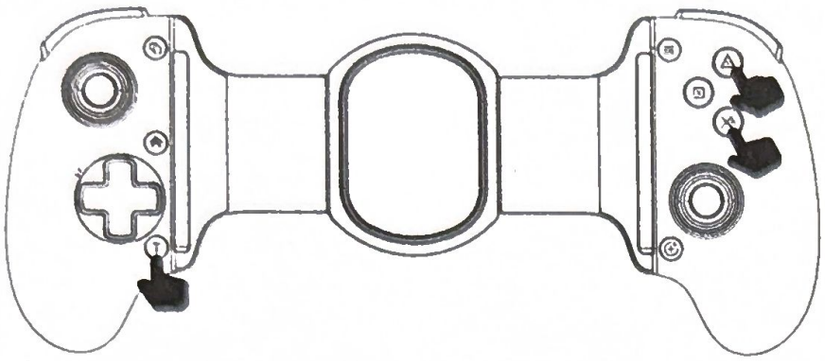

Press and hold the handle "Y"+"A"+"HOME", and the ABXY key value can be interchanged with the PC layout key value and the Switch layout key value.

Macro programming:

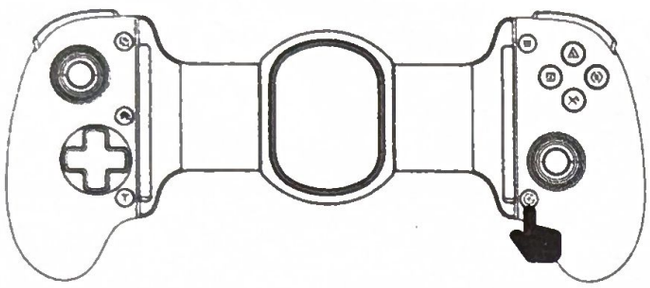

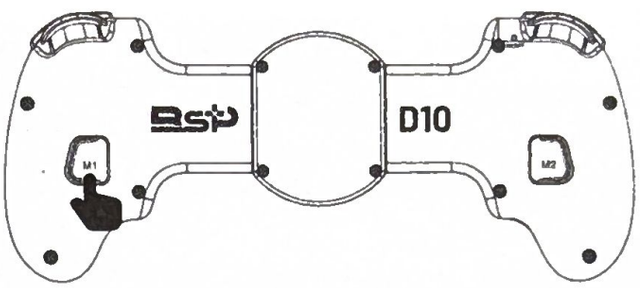

【Back macro extension settings】

① Press and hold the "programming key" on the handle, then press "M1". At this time, the indicator light will flash quickly, which is the setting mode
[M2 setting method as above]
② After the setting mode is turned on, the indicator light will flash quickly. At this time, the buttons can be set, and the key pressed by the handle will be recorded on the M1 button. For example, press the A key once, and A will be entered into M1. [This key is listed: other key positions can also be entered]
③ If multiple buttons need to be set: press A, then press B, then press X, and then press Y, so that the order of using M1 to attack is A, B, X, and Y. [This button is set to list: other attack orders can be set with 12 ABXY/up, down, left, right/L/ZL/R/ZR]
④ After pressing the button, press M1 again to complete the programming, and the indicator light will remain on.

【Back macro clear button】

Simultaneously press and hold the "Programming Key" and "M1" keys on the handle to enter programming mode. At this time, the indicator light will flash quickly. Do not type any key values at this time. Press the "M1" key again to eliminate the key values set before the M1 key.

Handle charging/hibernation/wake-up function:

1. Handle charging function:
   When the battery is low, the indicator light flashes quickly to indicate;
   When charging, the indicator light flashes slowly to indicate;
   When fully charged, the handle shuts down;

2. Handle sleep/wake up/shutdown function:
A. The handle automatically shuts down and sleeps when there are no button operations within 5 minutes;
B. When you need to use it again, you need to press the“HOME”key to wake up and reconnect;
C. In the power-on state, press and hold the“HOME”button for 8 seconds to shut down the product and turn off all LED indicators.

Operation and usage mode:

Bluetooth mode:

Applicable system	Android/Harmony OS		iOS system
Working mode	ShootingPlus V3	Android Standard Mode	iOS MFI mode
Mode pairing (2 seconds long)	A+HOME	X+HOME	B+HOME
Status indicator	Red	Orange	Purple
notes	Play games downloaded from the Android Market	Play Android HID Game Hall	Play the MFi game ShanWan MFi App for download

Computer receiver and data cable mode:

Applicable system	Computer/PC/Bluetooth	PC 2.4G	PS3 / PS4 / PS5	Switch
Mode pairing (2 seconds long)	RB+HOME	LB+HOME	Plug in USB data cable	RT+HOME or Plug in USB
Status indicator	Cyan	Cyan	Blue	Green
notes	Play X-input games	Play X-input and D-input game	Play PS3/PS4 games	Playing Switch Games

*Computers need an optional computer receiver

Precautions:

1、Do not store the product in wet or hot places;
2、Do not hit, hit, bat, pierce or attempt to break down the product to avoid unnecessary damage to it;
3、The product has built-in batteries, do not throw them away with garbage;
4、Do not charge the handle near fire or other heat sources;
5、Non-professionals should not disassemble this product, otherwise it is not in the after-sale warranty service.

Product List:

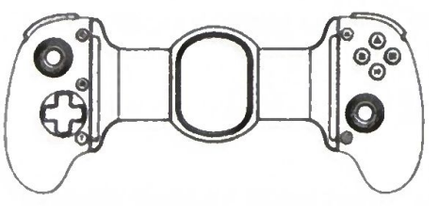

wireless handle *1

instructions *1



TYPE-C USB *1